### TROUBLESHOOTING CHART:

Problem	Cause	Solution
1. No discharge	a. No water b. Ball valve not open c. Eductor clogged	a. Open water supply b. Open ball valve c. Clean or replace
2. No concentrate draw	<ul> <li>a. Metering tip or eductor has scale build-up</li> <li>b. Low water pressure</li> <li>c. Discharge tube and/or flooding ring not in place (high flow only)</li> <li>d. Air leak at bottle/cap connection</li> </ul>	<ul> <li>a. Clean (descale)* or replace</li> <li>b. Minimum 25 PSI (with water running) required to operate unit properly</li> <li>c. Push tube firmly onto eductor discharge hose barb, or replace tube if it doesn't have a flooding ring</li> <li>d. Clean or replace cap</li> </ul>
3. Excess concentrate draw	a. Metering tip not in place	a. Press correct tip firmly into barb on pick-up stem
4. Failure of unit to turn off	a. Faulty ball valve	a. Clean* or replace ball valve
5. Excess foaming in	a. Air leak at bottle/cap connection	a. Clean or replace cap





Hydro Systems 3798 Round Bottom Road, Cincinnati, OH 45244 s Phone: (513) 271-8800 s Fax: (513) 271-0160

10092193 1/10



# MODEL 5845 & 5846 WITH RITE-CONNECT

Package Should Contain:

- 1. Satellite dispenser
- 2. Metering tip kit
- 3. Instruction sheet.

# 

### **Installation and Operation:**

KEEP

1. Remove dispensing unit from box.

2. The model 5845 dispensing unit is to be used with an F-style bottle. If you are using a round gallon bottle remove the screw from the cap access panel on the side of the dispenser. Firmly grasp cap and access panel with hand and pull toward you. Retain blank round spacer. Move cap to the position farthest away from the discharge tube. Reinstall blank round spacer in position closest to discharge tube. Snap cap access panel into place and secure with fastening screw. See diagram below for detail.

NOTE! CHANGING THE CAP POSITION FOR BOTTLE TYPE IS A ONE TIME ONLY CONVERSION.

#### **MODEL 5845**



The model 5846 dispensing unit is to be used with a round gallon bottle. If you are using an F-style bottle remove the screw from the cap access panel on the side of the dispenser. Firmly grasp cap and access panel with hand and pull toward you. Retain blank round spacer. Remove tube from cap assembly and trim approximately 1 1/4". Reinstall tube on barb of cap and reinstall cap assembly in the position closest to the discharge tube. Reinstall blank round spacer in position clostest to water inlet swivel. Snap cap access panel into place and secure with fastening screw. See diagram below for detail.

NOTE! CHANGING THE CAP POSITION FOR BOTTLE TYPE IS A ONE TIME ONLY CONVERSION.




CONTINUED ON NEXT PAGE....

- 3. Select metering tip using guide below. Install metering tip into barb in center of cap. NOTE: If using unit with a bottle that is pre-tipped DO NOT INSTALL METERING TIP IN UNIT!
- Secure dispensing unit to bottle. Use velcro strap to further secure bottle handle to dispensing unit. Connect water supply hose of at least 3/8" ID to water inlet swivel.

  (Minimum 25 PSI pressure, with water running, is required for proper operation.)

- Depress trigger to begin dispensing desired concentrate solution; release trigger to stop flow of solution. To lock trigger in "ON" position depress and hold trigger while sliding red lock button back then release trigger. To release lock push red lock button down and slightly forward to stop flow of solution.

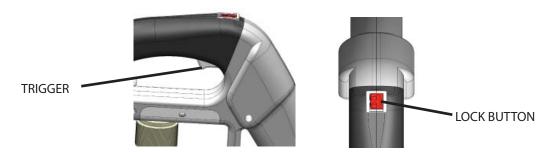

7. To disconnect, turn off water source. Make sure on/off valve is in OFF position. Disconnect water supply hose from unit.

Tip

Color

No Tip

Grey

Black Beige

Red

White

Blue

Tan

Green

Orange

Brown

Yellow

Aqua

Orifice

Size

.187

.128

.098

.070

.052

.043

.040

.035

.028

.025

.023

.020

.018

APPROXIMATE DILUTIONS

AT 40 PSI FOR WATER-THIN PRODUCTS (1.0 CP)

Ratio

(per Eductor Flow)

3.5 GPM

10:1

11:1

12:1

13:1

16:1

22:1

27:1

32:1

50:1

64:1

70:1

100:1

120:1

Std. Drill

Number

(3/16)

(30)

(40)

(50)

(55)

(57)

(60)

(65)

(70)

(72)

(74)

(76)

(77)

#### Metering Tip Selection:

The final concentration of the dispensed solution is related to both the size of the metering tip opening and the viscosity of the liquid being siphoned. For water-thin products, the chart at right can be used as a guideline. If product is noticeably thicker than water, consult the Measurement of Concentration Procedure below to achieve your desired water-to-product ratio. Because dilution can vary with water temperature and pressure, actual dilution achieved can only be ascertained by using the Measurement of Concentration Procedure. The clear, undrilled tip is provided to permit drilling to size not listed should you need a dilution ratio that falls between standard tip sizes.

NOTE: Refer to parts diagram if unfamiliar with names of system components.


#### Measurement of Concentration:

You can determine the dispensed water-to-product ratio for any metering tip size and product viscosity. All that is required is to operate the primed dispenser for a minute or so and note two things: the amount of dispensed solution, and the amount of concentrate used in preparation of the solution dispensed. The water-to-product ratio is then calculated as follows:

Dilution Ratio (X:1) where X = Amount of MixedSolution — Amount of Concentrate Drawn

mount of Concentrate Drawn	Purple	.014	(79)	200:1
	Pink	.010	(87)	400:1
Dilution Ratio, then, equals X parts water to one part concentrate (X:1). ' f the test does not yield the desired ratio, choose a different tip and epeat the test. Alternative methods to this test are 1) pH (using litmun information on these alternative methods and the materials required to			ontact your c	oncentrate supplier for furthe

# Parts Diagram List:

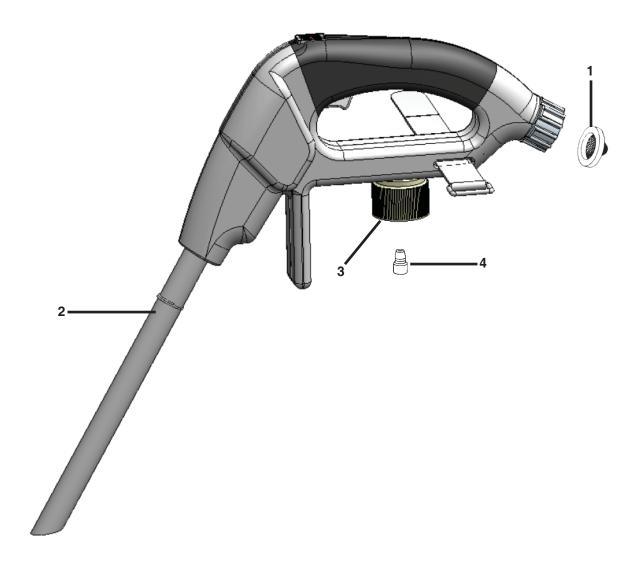

Part No.	Description
238100 90090232	Strainer washer Discharge tube, 10"
690014	Kit, cap replacement, Rite-Connect Metering tip kit
	238100 90090232 10092195